

KAHUNA  CHAIR®

KAHUNA MASSAGE CHAIR

SPIRIT

MANUAL





CONTENTS



Please read and follow all safety and operating instructions listed in this user manual prior to use. Basic precautions should always be used when operating an electrical appliance.





Safety Instructions	2
Product Components	7
Chair Installation	9
Remote Controller	13
Operation Guide	14
Maintenance	18
Troubleshooting	19
Product Specifications	20

SAFETY INSTRUCTION

- Please read this manual carefully to make sure the installation and operation of the massage chair is correct.
- “Safety Instructions” are provided in both Warning and Caution for important safety information.

Both Warning and Caution are important safety caution, please be more cautious.

 Warning	This sign indicates warning of causing possible death or hurt to body.
 Caution	This sign indicates caution of causing possible pain or damage to body.

	This sign indicates forbidden behavior.
	This sign indicates must follow instruction to operate.
	This sign indicates self disassembly is forbidden.
	This sign indicates correct operation of cable.

- The following should be kept for any further references.



Warning

	<ul style="list-style-type: none"> • Osteoporosis patient ; • People with heart disease including embedded pacemaker or other medical electronic device inside the body ; • For pregnant women or people with health issues, please consult doctor before use ; • Patients with a high fever forbid to use this machine. • Perceptual disabilities patients forbid to use this machine. • People over 80 years old forbid to use this machine. • Kids and the drunk people are not allowed to use the chair ; • Please don't sleep in the chair. • Don't use the chair when your body is wet. 	<p>People who are not suitable to use the chair</p>
	<ul style="list-style-type: none"> • Make sure there are no kids or pets or other objects around (under, behind or in front of) the chair at the moment of backrest, leg-rest up/down or leg-rest retraction/extension from reclining position. • During operation, if body is being abnormal, please stop the operation and go consult with your physician. • Please do not take strong massage on the head. • Do not massage belly or knees, be careful when massaging neck • Children or pets are not allowed to play on the chair especially during massage. Standing or sitting on the back or armrest is not allowed either. • Those who move around with difficulty or can't express themselves must be taken care of strictly and continuously during massage. 	<p>Accident /injury</p>
	<ul style="list-style-type: none"> • Insert the plug of the chair into correct and suitable power socket. • Make sure the plug is completely inserted into the socket to reduce short circuit or fire risk. • Unplug the power when not in use, stop all massage functions and turn off on/off key before unplugging. 	<p>Fire and electric shock</p>
	<ul style="list-style-type: none"> • Massage cushions of the chair are not allowed to fold for storage. • The machine is forbidden for no-load running for a long time. 	<p>Accident</p>
	<ul style="list-style-type: none"> • Power cord, plug, socket can't be used in broken or loose contact condition. • Don't use other electric power except rated voltage in case of fire, electric shock or any breakdown. • Any broken, re-process, knotted, twisted power cord or pressed under heavy cargo is not allowed to use. 	<p>Fire and electric shock</p>

SAFETY INSTRUCTION



Warning



- If the chair is dysfunctional, or is broken, splashed with water or falls into water, please have it repaired by professional repairman or send the chair to assigned service agent. Self-modification, disassembly or maintenance is forbidden.
- If power cord or plug is damaged, please don't replace it yourself, please contact us or appointed dealer for replacement.
- To avoid electric shock or body injury, please don't open or disassemble any part of the chair, there is not any attached part of the chair for maintenance by customers.
- Check leather or cloth material on the back and other areas is broken or not. If broken, even though it is small, please stop using the chair, unplug the power and have it repaired.

Disassembly and maintenance



Caution



- Please operate the chair when it is flat or on leveled place
- Position the chair 4 inches from the wall to allow for sufficient space to recline up and down.
- The maximum suggested operating time is 20 mins. 5 mins for each position beginning with the slight- step massage. Along continuous massage in the same position may cause uncomfortable feeling.
- Before sitting on the chair to avoid injury please inspect everything to confirm that the massage heads are in the correct position.
- Please make sure that the power switch is on "OFF" position before inserting the plug into the socket.
- Turn off all controls before removing plug from outlet.
- Make sure the plug is completely inserted into the socket.
- Checking whether there are any damages on the wire and make sure there are no water or rubbish on the wire.
- Installing the wire in a correct way.
The plug must be inserted into socket with the connect, the connect couldn't be bent or cut off.

To avoid sudden falling.

To make sure the back lying.

Too long time massage is bad for your body.

To avoid accidental injury.

To avoid the accident when turn on the power.

To reduce short circuits and any fire hazard.

To avoid electric shock in any leakage or breakdown.



- Don't use or store the chair in the wet environment like near the swimming pool, or bathroom.
- Keep the chair and remote control dry at all time.
- Don't use the chair when your body is wet.

To avoid leakage or electric shock.

**Caution**

	<ul style="list-style-type: none"> • Don't press with hands or step on the massage heads with feet. • Don't put hands between the working massage heads. Don't put hands or feet in the gap of mechanical parts. Don't drop or insert anything into the slot of massage chair. • Don't stand or sit or put anything on the backrest, armrest, or leg-rest. • Don't stand on the chair during operation. Don't move the chair during operation. • Don't pull out the plug or turn off the power during operation. Don't put your hands or head between leg-rest or beneath. Don't use the massage chair while wearing hair ornaments. • Don't put hard things in pocket when take buttocks and huckle massage. • Don't sit or press on the backrest when the chair is in reclining position. • Don't use on bare skin or wearing thin clothes, thin clothes may cause better massage effect, But it also may cause irritation to the skin or cryogenic burns. 	<p>To avoid accidents or injury</p>
	<ul style="list-style-type: none"> • Keep the chair away from heat, wet, sharp things and corrosive, inflammable, explosive environment. • To use electric blanket or other heating products on the chair is forssiden. • Don't put in the space of dust serious or corrosive gas environment. • Don't put the chair in a small space places or use in the bad air circulation places. 	<p>To avoid fade, discolor on upholstery or hardened, deteriorated on PU.</p>
	<ul style="list-style-type: none"> • Make sure to install the wire in correct way(Incorrect install way may cause electric shock. If you don't know how to install, please find a professional electrician) • Don't use plug adapter (If the enclosed plug doesn't match with socket, please don't change the plug by yourself and find a professional electrician to install a matched socket.) 	<p>To avoid electric shock.</p>

SAFETY INSTRUCTION



Caution

	<ul style="list-style-type: none">• Unplug the power before cleaning the chair.• Unplug the power after using the chair.	To avoid electric shock or fire harzard.
	<ul style="list-style-type: none">• Unplug the power when any damage on the power.	
	<ul style="list-style-type: none">• Hold the plug to unplug the power but to not try to pull the wire to unplug the power.	
	<ul style="list-style-type: none">• Please turn off the power switch and unplug the power after massage.	To avoid accidents
	<ul style="list-style-type: none">• Unplug the power immediately when electricity goes off.	To avoid damage or accidents when power on again.



 
Warning : 1.Do not use it when gets wet.
2.The disabled ot people who need supervision.
3.The chair has heat function, people who are insensitive to heat must pay high attention.

| Grounding instruction |

The chair is equipped with a cord having a grounding conductor. The plug must be plugged into an appropriate socket that is properly installed and matched with the plug.

| Replace fuse |

When the fuse is burned out, please turn off the switch and unplug the power. Open the electrical compartment lid which is located in the switch box. Using a same size fuse to replace the old one, then cover the lid or you can find an electrician to replace the fuse.

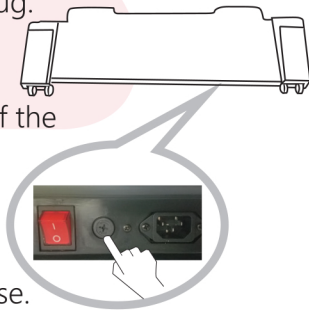


Earth wire is not allowed to be in these places

Gas pipe: probably cause explosion or fire.
Phone wire and lightning rod: probably cause electric shock and fire when thundering.
Water pipe: earth wire is useless where there are plastics

PRODUCT COMPONENTS


| Main body diagram (front) |

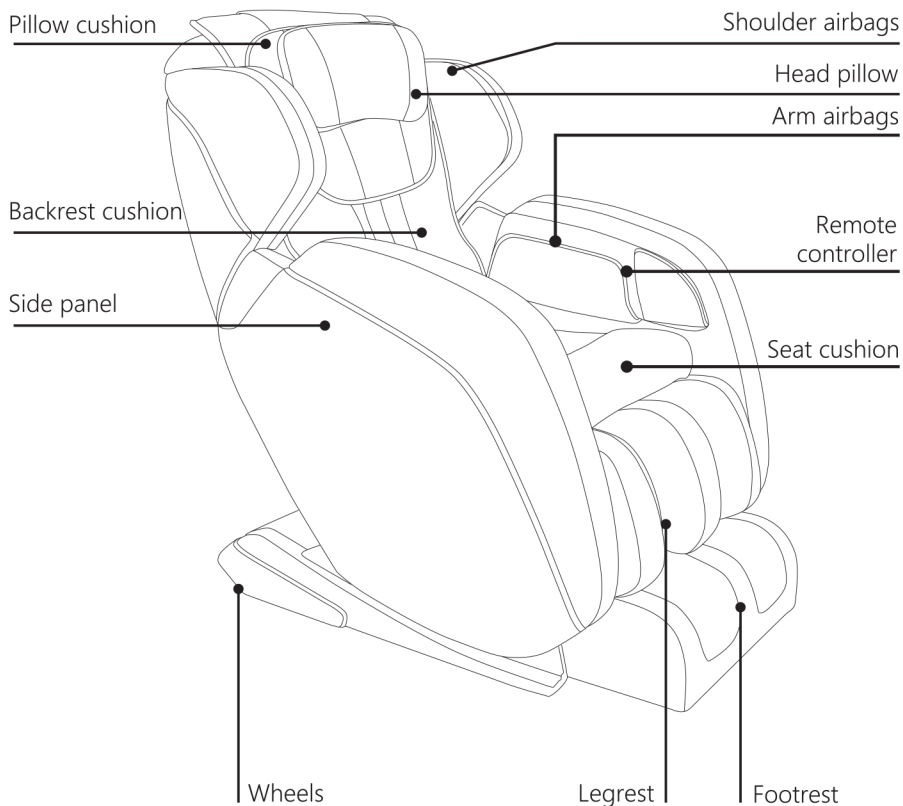 


Built in premium bluetooth speakers

PRODUCT COMPONENTS


| Main body diagram (rear) |

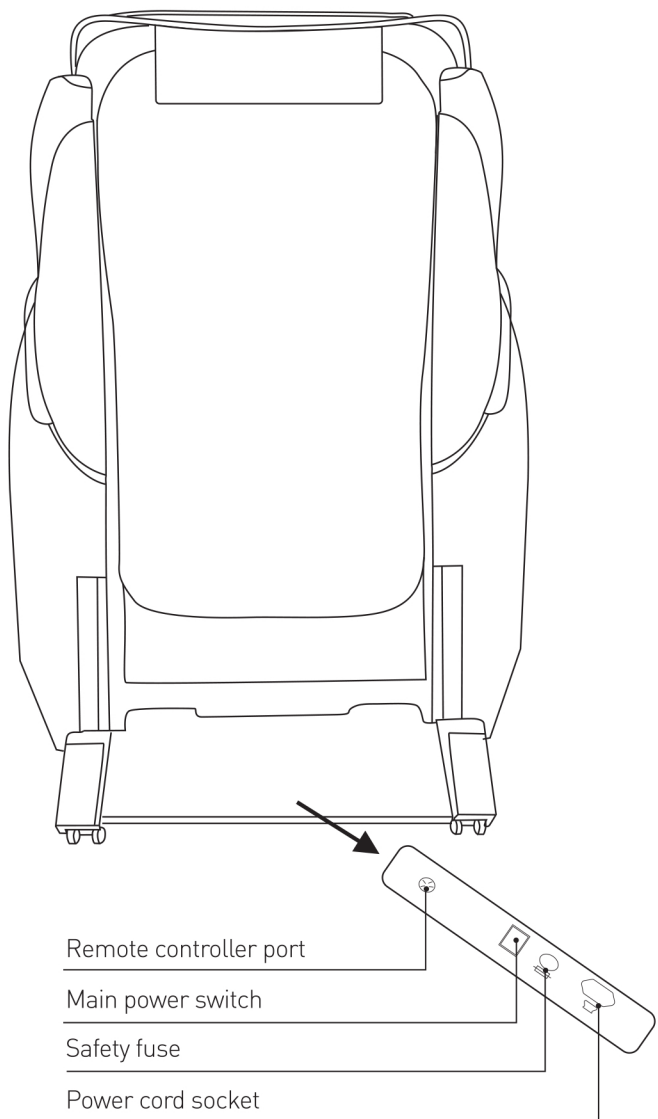 


1. Remove the package and take out the spare parts |

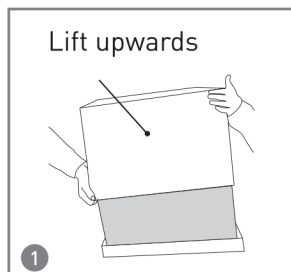 

Remove the carton.

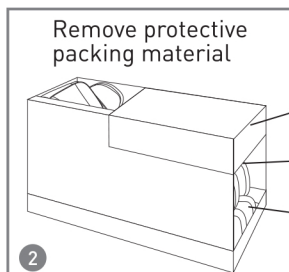 


Take out the packing material.

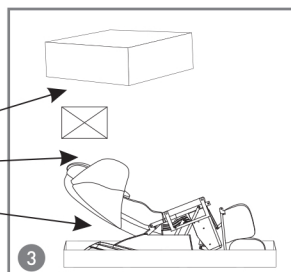 

Install the pillow, backrest cushion, cushion and spare parts.

*The spare parts include: remote control, user manual and power cord.


2. Install the leg frame |

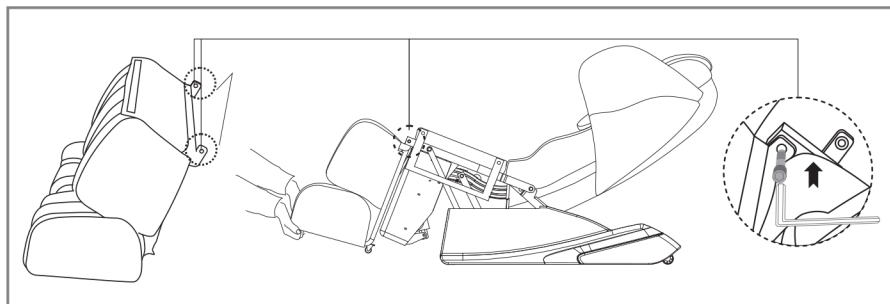 

Lift the leg rest and align the screw hole with the massage chair screw hole and fasten the screw with a screwdriver on both sides.


CHAIR INSTALLATION

3. Install the side board |

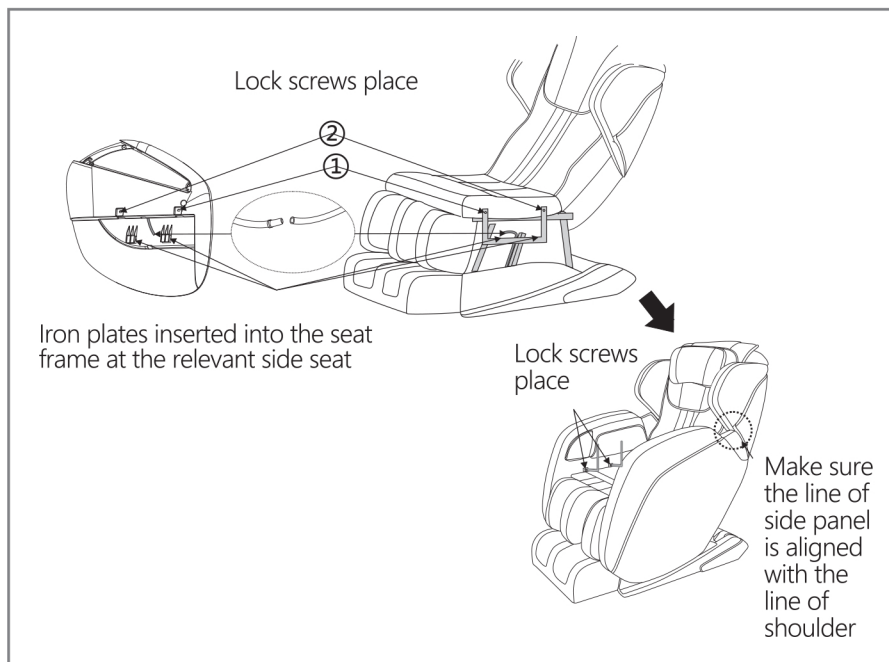 

- 1 To unpack the side panel carton box, remove foam from both sides.
- 2 Connect the air valve pipe of the side panel (armrest) and side seat structure. Please connect neatly and firmly to avoid air leaking.
- 3 Please align the screw holes of side panel (armrest) and massage chair, insert clip panel to corresponding area of seat structure iron plate. Tighten up all screws. Same installation applies on both side of the armrest.

4. Place the massage chair in an open area |

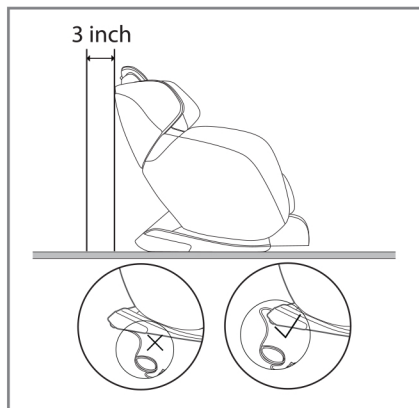 


- Allow sufficient space around the chair for recline purposes.

- 3 inch distance for the back side and 19.7 inch in front of the foot rest.



CHAIR INSTALLATION

 5. Moving the massage chair

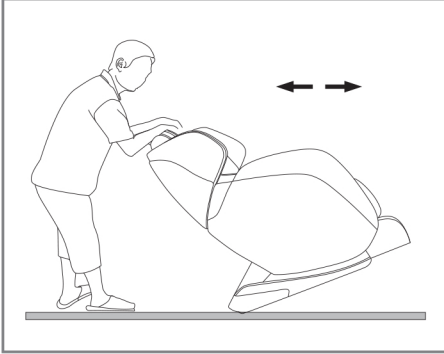

- As the following illustration, push the back rest downwards and tilt chair on to its wheels at 45° angle. Slowly push and maneuver the massage chair to desired location. Lower massage chair slowly and smoothly until it is fully flat on the ground.

CAUTION: *Do not move massage chair when occupied or in use.

*Moving the massage chair may cause damages to the floor. Floor protection is recommended (e.g. rugs or carpet).

*Do not drop or suddenly let go when use of the chair when moving as it may damage the chair.

*Two persons are strongly recommended while moving and extra care when handling the massage chair.

REMOTE CONTROLLER

Remote controller



OPERATION GUIDE

| 1. Function description of controller buttons |



Power button

Press the power button to turn on the massage chair. Press again to power off, then the massage chair will return to default upright position.



Pause button

Use this button to temporarily pause the massage program. To continue, press a second time.

Auto mode



Intelligent automatic programs

 
Press once to initiate the first of four intelligent automatic programs, which are sequenced as the following - If you use it continuously, please have 10 minute rest, in order to lessen the burden to the body.

Position adjustment buttons



Press the button first, massage back and leg position to zero G1, press second, the position to zero G2, press third, the position to zero G3, press fourth, massage chair return to original position.

Zero G1 → Zero G2 → Zero G3 → Original Position

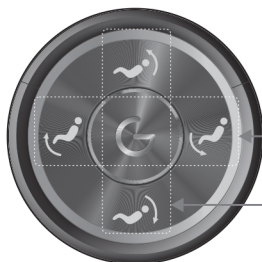

Press the button and hold on to the button to adjust the footrest independently.

Press the button and hold on to the button to adjust the massaging position of backrest or legrest.


P.S: The position adjustment button have no function when the chair in the stretch program.


Timer button





5-30 minutes adjustable, 5 minutes as a adjustable unit, default working time : 15 minutes.


| Manual mode |


-  **Heating Therapy** : Switch on/off for back heating function.


-  **Vibration Function** : Switch on/off for vibration with intensity level.


-  **Roller width** : Press to adjust massage roller widths from narrow to medium to wide. Width adjustment is not available in kneading mode.


-  **5 manual massage programs** : This button allow you to choose the most desirable personal massage program such as kneading, tapping, dual, shiatsu and rolling.


-  **Speed of rollers** : For Tapping, Kneading, Dual action and Shiatsu speed adjustment up to 3 levels.


-  **Foot rollers** : Press this button to turn on/off the foot roller function.

-  **Fixed Spot Massage** : Press to stop the rollers at a particular area for a fixed point focal massage in manual mode.

-  **Roller location adjustment** : Hold the up or down arrow to move the massage rollers to the desired location.

-  **Pressure massage position button** : Each time you press this button, there will be a spot flashing in screen, which means that part will be massaged. press the button continued, there will be different parts of the combination of massage.

 
 
-  **Area intensity** : This button allows for you to control the intensity of the air bag for 5 different intensity levels.

-  **Area adjustment button** : In manual mode, press to select between specific areas in the following order:

Back→Waist→Seat→Back & Waist→Waist & Seat→The whole body

↑

2. Display diagram

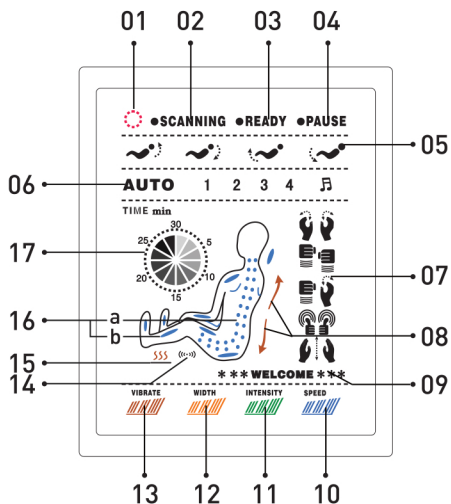


2. Massage chair is scanning the back and preparing for initiation.

3. Scanning is complete and ready for message programs.

4. Pause button has been pressed and chair is tempo rarely stopped.



 6. Display which automatic program is activated.



9. Greetings message when preparing to start.

10. Shows the message speed levels.

 
11. Shows the air intensity level.

12. Shows message roller width.

13. Shows message vibration level.


14. Vibration function is on.

15. Heating therapy function is on.



3. Massage chair Bluetooth music player instruction


 
a. Bluetooth pairing : Turn on Bluetooth on your device such as a cellphone or IPAD and search, select the Bluetooth music device of this massage chair in the search results and pairing, the password is 0000 (or 1234). (Note : The massage chair Bluetooth code Spirit)

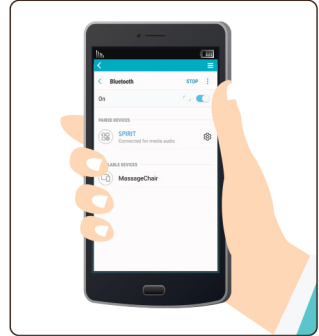

b. Play Music : After successful pairing with a cellphone or IPAD, use music software of the device to control the music.

Note The massage chair can connect only 1 Bluetooth device at a time. If connect results in failure, please switch off the chair and restart. Turn off the Bluetooth connection when is not used to save power.

  4. After use

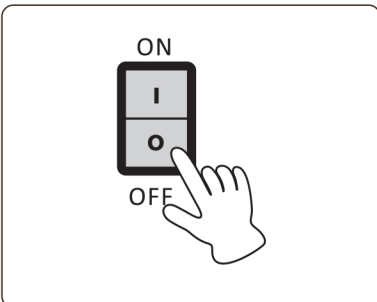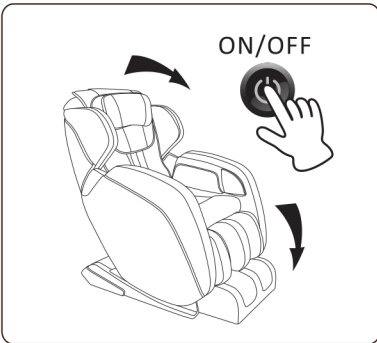

1. After the massage program is completed return the massage chair to upright position by turning off the massage chair.

Please check the surrounding prior to adjust the recline angle, paying special attention to children or pets that may be in close proximity.




2. Press the power button to power off the massage chair and return remote controller to the storage area on arm pocket.

3. Turn off main power switch when you are not using the chair for a long period of time. Remove Plug from the power outlet to avoid accidents by kids and pets.


4. Do not operate with wet hands.

MAINTENANCE

| Use dry cloth to clean |

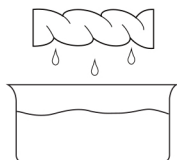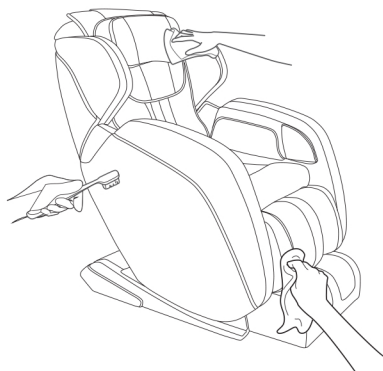   

 Turn off and pull out the plug before cleaning the massage chair, do not touch the plug with wet hands.

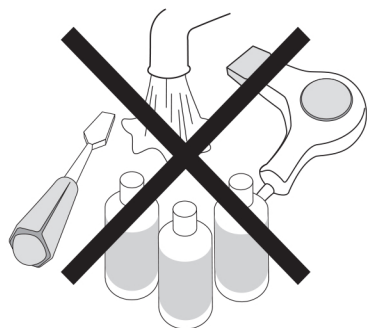

Prohibit using liquid cleaning products like water, alcohol, or other cleaning product to maintain a good quality.

TROUBLE SHOOTING

If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet. Please contact the customer service department for further assistance.

855.646.9500 / 1.714.388.2625, service@kahunachair.com

Problem	Solution
The massage chair is connected to power but is not functioning.	Check to see if the power plug is inserted or if the power outlet is functioning properly.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30 to 50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" mode when a massage program is completed. Please press the power button again to turn of the chair.



KAHUNA CHAIR PRODUCT WARRANTY REGISTRATION
<https://www.kahunachair.com/services/>

PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Kahuna Massage Chair
Model No.	SPIRIT
Rated Voltage	110-120V~
Rated Frequency	50/60Hz
Rated Power Consumption	230 W Max.
Dimension (LxWxH) Inches	65.4 x 29.5 x 34.3 inches
Weight (LBS)	Net Weight: 216 lbs Gross Weight :247 lbs



Product Massage Chair

Model SPIRIT


Distributed by AJX Distribution LLC

11125 Knott Ave, Suite D

Cypress, CA 90630

Tel 1-855-646-9500

 Email INFO@KAHUNACHAIR.COM

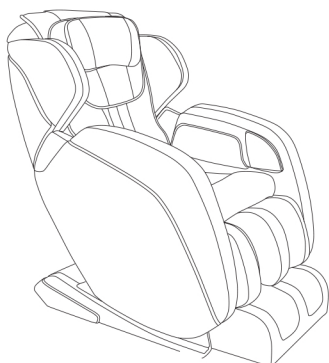

You must register warranty at www.kahunachair.com/services/

INSTRUCTION MANUAL
MODEL : SPIRIT

Plaes read this user manual thoroughly
prior to operating the massage chair.
Store this booklet for future reference.