

# SPIRIT

---

**Product** Massage Chair

**Model** SPIRIT


Distributed by AJX Distribution LLC  
7001 Village Dr #250  
Buena Park, CA 90621

**Tel** 1-855-646-9500

**Email** INFO@KAHUNACHAIR.COM

KAHUNA  
MASSAGE CHAIR®

**SPIRIT**  
Massage Chair Manual

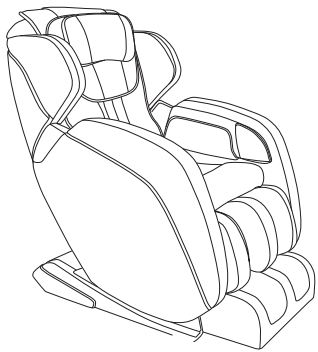

INSTRUCTION MANUAL  
MODEL:SPIRIT


Please read this user manual thoroughly prior to operating the massage chair. Store this booklet for future reference.



KAHUNA  CHAIR


MAINTENANCE

CONTENTS

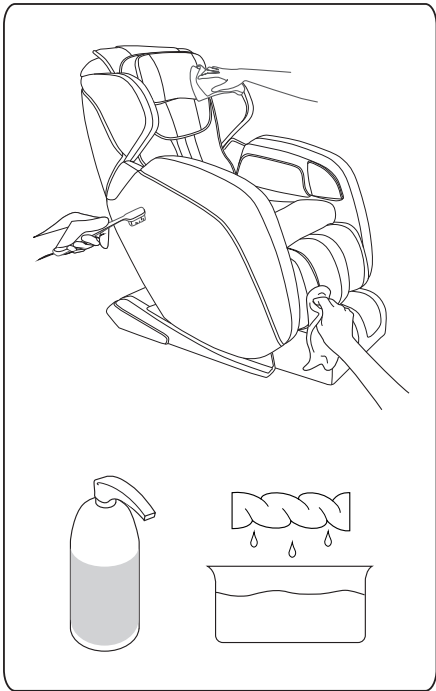

Use dry cloth to clean

Turn off and pull out the plug before cleaning the massage chair, do not touch the plug with wet hands.

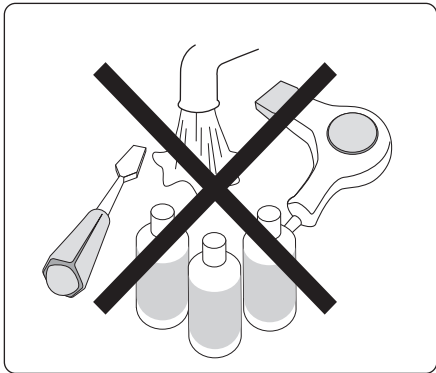

Prohibit using liquid cleaning products like water, alcohol, or other cleaning product to maintain a good quality.

Please read and follow all safety and operating instructions listed in this user manual prior to use. Basic precautions should always be used when operating an electrical appliance.

Safety Instructions	2
Product Specifications	4
Product Components	5
Chair Installation	7
Remote Controller	10
Operation Guide	11
Troubleshooting	15
Maintenance	16

## SAFETY INSTRUCTION

### Warning

The power plug must be inserted properly to the outlet. If the connection of the equipment-grounding conductor is not connected properly it can result in the risk of electric shock. Check with a qualified electrician or service technician, if you are in doubt as to whether the product is properly grounded. Do not modify the plug that was provided with the product, if the outlet is not suitable. Please make sure that the outlet is properly installed by a qualified electrician. When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock, burns, fire or injury.

1. Please make sure that the power plug of massage chair is properly inserted in a proper electrical outlet.
2. Make sure the power plug is properly inserted into the proper electrical outlet to reduce the risk of short-circuit and fire.
3. Always unplug the massage chair from the electrical outlet immediately after use, before cleaning, etc.
4. Do not use the massage chair in places where the humidity is high.
5. Do not use the massage chair outdoors and avoid place with direct sunlight.
6. If the power turns off during use make sure to switch the power OFF position and pull the power plug out from the socket to prevent damage from occurring when the power is restored.
7. Do not operate the massage chair if the power cord is wet or damaged.
8. Do not plug/unplug the power cord from the socket with wet hands.
9. Supervision is necessary when the massage chair is being used by on or near the children or disabled persons.
10. Use the massage chair only for its intended use as described in this user manual.
11. Do not stand, sit or jump in the calf rest, back rest and armrest when the massage chair is in use to prevent any injury.
12. Do not fall asleep during the massage session.
13. Always keep the massage chair clean and do not insert any object into the gaps and around the massage chair.
14. Do not move the massage chair by pulling the power supply cord.
15. Make sure that there is no person (children in particular) pet or obstacles underneath the massage chair prior to lowering the leg rest/backrest.

## TROUBLE SHOOTING

If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet. Please contact the customer service department for further assistance.

855.646.9500 / 1.714.388.2625, [service@kahunachair.com](mailto:service@kahunachair.com)

Problem	Solution
The massage chair is connected to power but is not functioning.	1.Check to see if the power plug is inserted or if the power outlet is functioning properly. 2.Check to see if the main power switch is in the "I" position.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30 to 50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" or into "idle" mode when a massage program is completed. Please press the power button again to turn of the chair.

## OPERATION GUIDE


### 3 Massage chair Bluetooth music player instruction

- a. Do pairing: Turn on Bluetooth on your device such as a cellphone or IPAD and search, select the Bluetooth music device of this massage chair in the search results and pairing, the password is 0000 (or 1234). (Note: The massage chair Bluetooth code Spirit)
- b. Play Music: After successful pairing with a cellphone or IPAD, use music software of the device to control the music.

#### Note


The massage chair can connect only 1 Bluetooth device. If connection fails, please switch off the chair and restart. Turn off the Bluetooth connection when is not used to save power.

### 4 After use

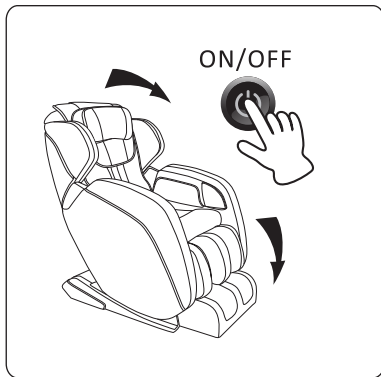

1. After the massage program is completed return the massage chair to upright position by turning off the massage chair.

Please check the surrounding prior to adjust the recline angle, paying special attention to children or pets that may be in close proximity.

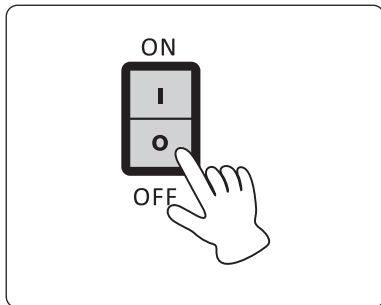

2. Press the power button to power off the massage chair and return remote controller to the storage area on arm pocket.
3. Turn off main power switch when you are not using the chair for a long period of time. Remove Plug from the power outlet to avoid accidents by kids and pets.
4. Do not operate with wet hands

## TROUBLE SHOOTING

16. Always check the surface of the massage chair if it is torn or ripped before usage, if you find any unfamiliar rips in any area of the cloth in the back rest, do not use the massage chair. Kindly contact the service center for repair.
17. This appliance is designed for household use only.
18. For those suffering from illness, please consult your doctor for advice prior to use.
19. The following conditions should consult doctors before use:
  - (a) Suffering malignant tumor
  - (b) People with heart disease
  - (c) Women in pregnancy, menstruation and puerperal fever
  - (d) People who are medicated or under medication
  - (e) People with osteoporosis
  - (f) People with back bended exceptionally by the accident or disease
20. If you experience pain during usage, stop using the massage chair immediately. If any injuries occur, seek medical treatment immediately.
21. Do not massage the swollen or inflamed parts of the body.
22. This product is non-professional appliance designed to provide a comfortable massage. Do not use this product as substitute for medical treatment.
23. Each massage session should not exceed 30 minutes. Massage the targeted area only for 15 minutes, over massaging can lead to over heating, thus giving the appliance a shorter lifespan.
24. Do not operate where aerosol (spray) products are used or where oxygen is being administered.
25. The massage chair is not suitable for children age under 12 and below.
26. Please make sure that the massage chair is placed on a flat level ground.

#### Note

This appliance is not intended to use by people (including children) to reduce physical sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning to use this appliance by a responsible person for their safety.


Children must be supervised to make sure that they do not play the appliance. If the supply cord is damaged it must be replaced by a special cord or assembled available from the manufacturer or its service agent. This appliance heats up during operation, people sensitive to heat must take extra caution when using this appliance.

## PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Kahuna Massage Chair
Model No.	SPIRIT
Rated Voltage	110-120V~
Rated Frequency	50/60Hz
Rated Power Consumption	230 W Max.
Dimension (LxWxH) Inches	65.4 x 29.5 x 34.3 inches
Weight (LBS)	Net Weight: 216 lbs Gross Weight :247 lbs

## OPERATION GUIDE

### 2 Display Diagram

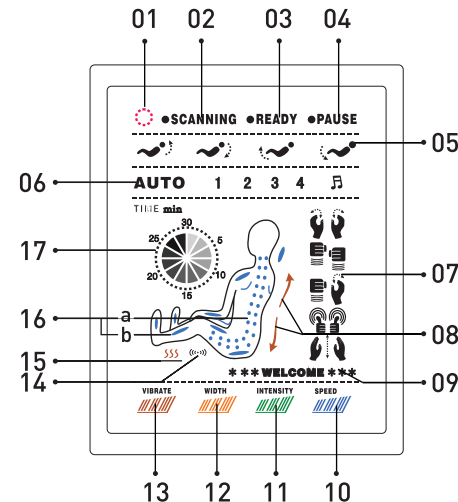












1. Massage chair is powered on.
2. Massage chair is scanning the back and preparing for initiation.
3. Scanning is complete and ready for massage programs.
4. Pause button has been pressed and chair is temporarily stopped.
5. Reclining position adjustment
6. Display which automatic program is activated.
7. Display which massage technique is activated at the time.
8. Depicts the direction of the massage rollers, moving upwards or downwards.

9. Greetings message when preparing to start.
10. Shows the massage speed level.
11. Shows the air intensity level.
12. Shows massage roller width.
13. Shows massage vibration level.
14. Vibration function is on.
15. Heating therapy function is on
16. Display the direction of the massage rollers, moving upwards or downwards.
17. Display current time remaining in current massage program.

## OPERATION GUIDE


### Manual Mode

-  **Heating Therapy** Switch on/off for back heating function.
-  **Vibration Function** Switch on/off for vibration with intensity level.
-  Press to adjust massage roller widths from narrow to medium to wide. Width adjustment is not available in kneading mode.
-  5 manual massage programs. This button allow you to choose the most desirable personal massage program such as kneading, tapping, dual, shiatsu and rolling.
-  Speed for Tapping, Kneading, Dual action and Shiatsu speed adjustment up to 3 levels.
-  Press this button to turn on/off the foot roller function.
-  **“Fixed Spot Massage”** Press to stop the rollers at a particular area for a fixed point focal massage in manual mode.
-  Roller location adjustment: Hold the up or down arrow to move the massage rollers to the desired location.
-  Pressure massage position button. Each time you press this button, there will be a spot flashing in screen, which means that part will be massaged. press the button continued, there will be different parts of the combination of massage.
-  This button allows for you to control the intensity of the air bag on 5 different intensity levels.
-  **“Area adjustment button”** In manual mode, press to select between specific areas in the following order:  
 Back → Waist → Seat → Back & Waist → Waist & Seat → The whole body




## PRODUCT COMPONENTS

### Main Body Diagram (Front)

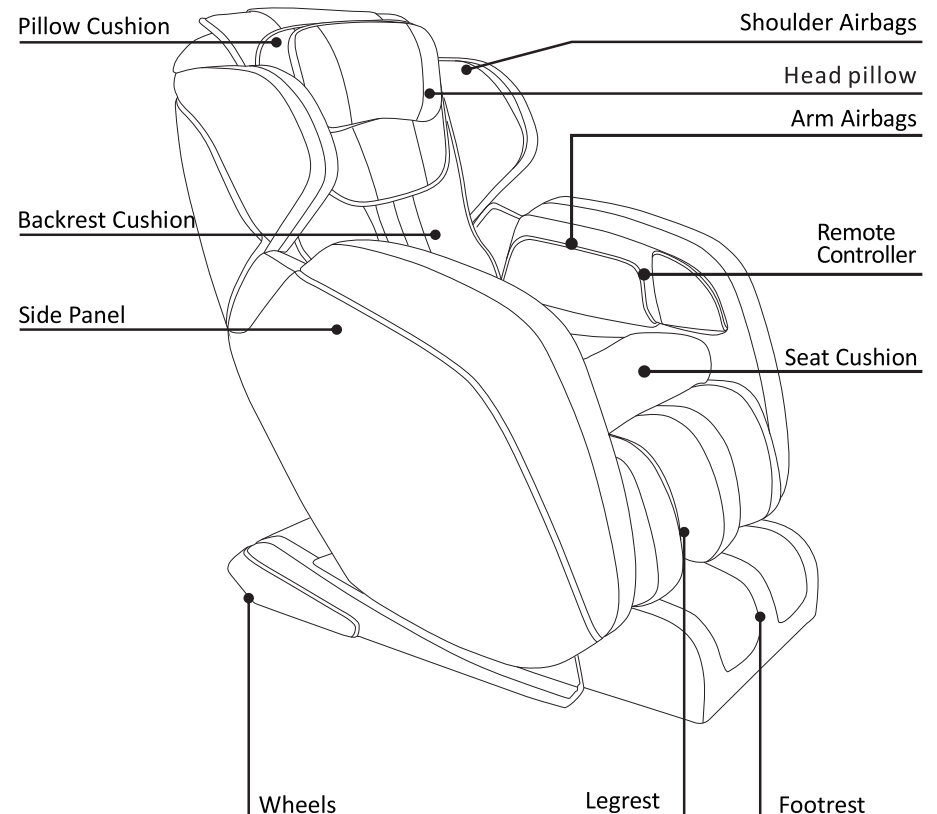

## PRODUCT COMPONENTS

### Main Body Diagram (Rear)

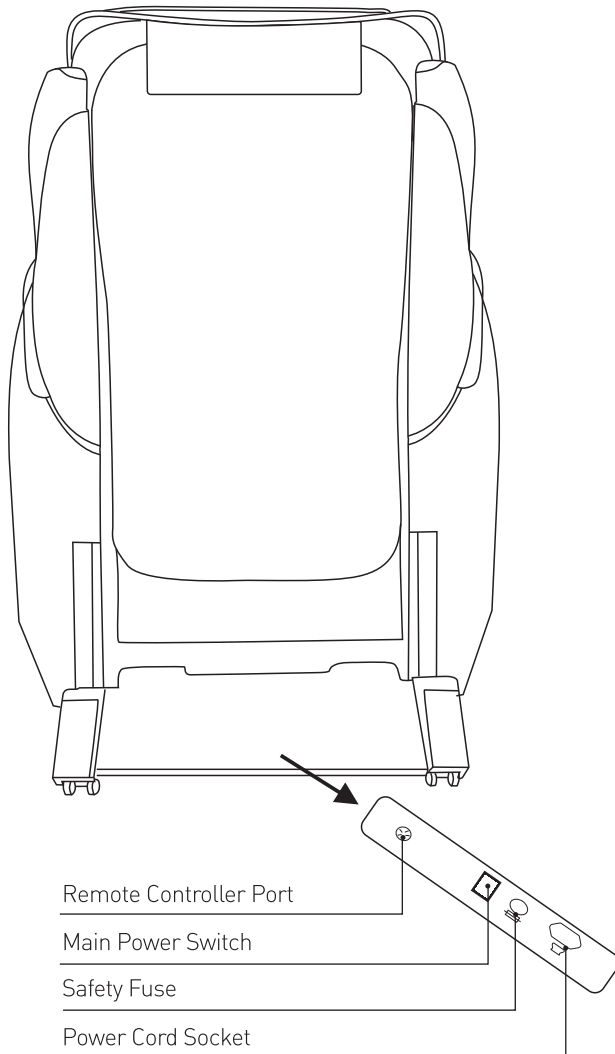

## OPERATION GUIDE

### 2 Function description of Controller buttons



#### Power Button

Press the power button to turn on the massage chair. Press again to power off, massage chair will then return to default upright position.



#### Pause Button

Use this button to temporary pause the massage program. To continue, press a second time.

#### Auto mode



#### Intelligent Automatic Programs

Press once to initiate the first of four intelligent automatic programs, which are sequenced as follows - If you use it continuously, please have 10 minutes rest in order to lessen the burden to the body.

#### Position Adjustment Buttons



Press the button first, massage back and leg position to zero G1, press second, the position to zero G2, press third, the position to zero G3, press fourth, massage chair return to original position.

Zero G1 → Zero G2 → Zero G3 → Original Position



Press the button and hold on to adjust the footrest independently.

Press the button and hold on to adjust the massaging position of backrest or legrest.

*P.S: The position adjustment button have no function when the chair in the stretch program.*


#### Timer Button



5-30 minutes adjustable, 5 minutes as a adjustable unit, default waking time : 15 minutes.


## REMOTE CONTROLLER

### 1. Remote Controller

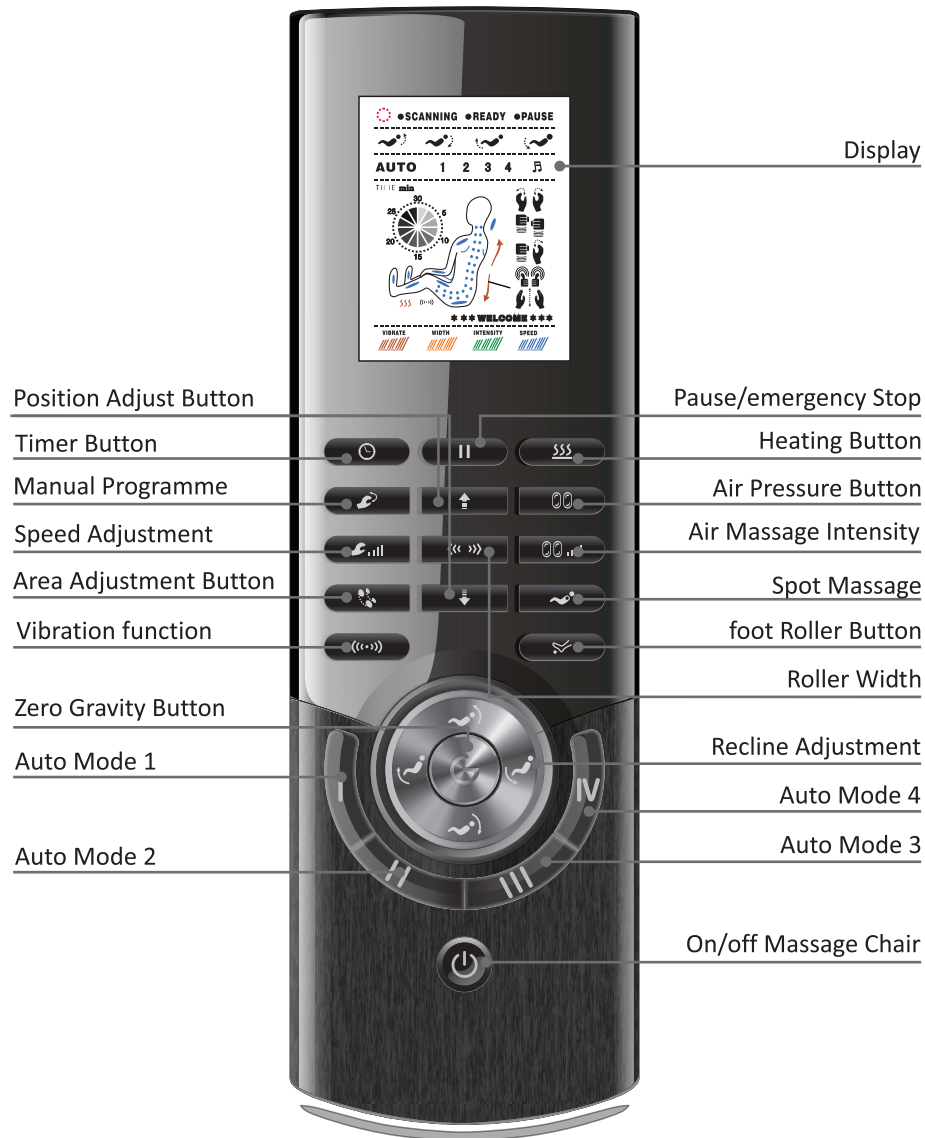

## CHAIR INSTALLATION

### 1. Remove the package and take out the spare parts

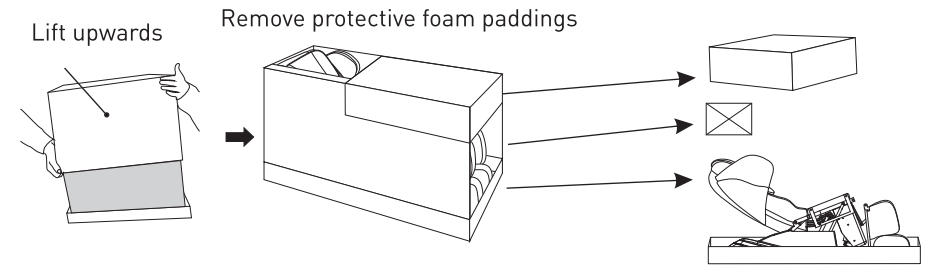


**STEP1** Remove the cartons.

**STEP2** Install the pillow, back rest cushion, cushion and spare parts.

**STEP3** The spare parts include: remote control, user manual and power cord.


### 2. Install the leg frame

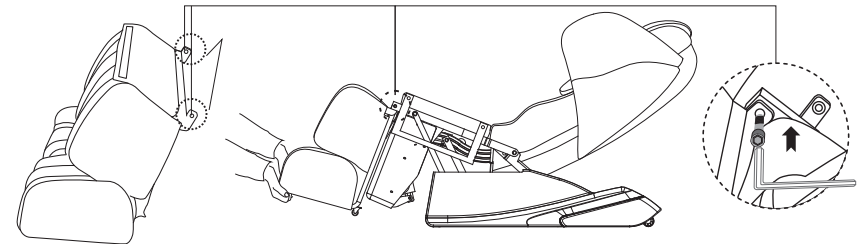

**STEP1** Lift the leg rest and align the screw hole with the massage chair screw hole, fasten the screw with a screwdriver on both sides.


## CHAIR INSTALLATION

### 3. Install the side board

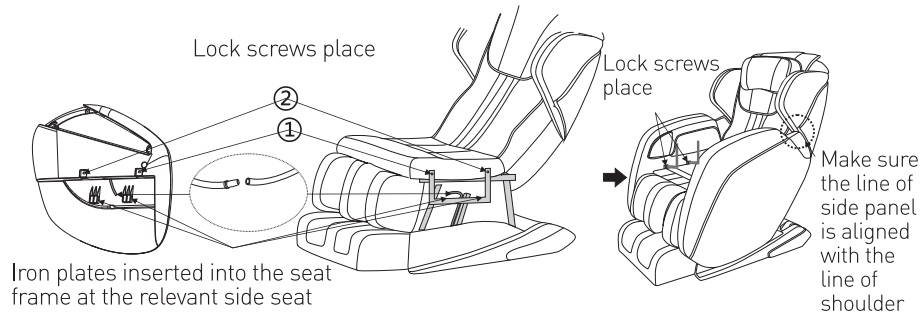

- STEP1** To unpack the side panel carton box, remove foam from both sides.
- STEP2** Connect the air valve pipe of the side panel (armrest) and side seat structure. Please connect neatly and firmly to avoid air lacking.
- STEP3** Please align the screw holes of side panel (armrest) and massage chair, insert clip panel to corresponding area of seat structure iron plate. Tighten up all screws. Same installation applies on both side of the armrest.


### 4. Place the massage chair in an open area

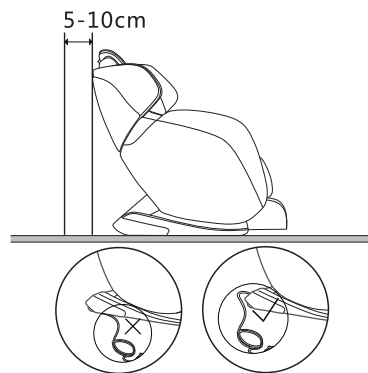

- Allow sufficient space around the chair for recline purposes.
- 5-10cm distance for the back side and 50cm in front of the foot rest.

## CHAIR INSTALLATION

### 5. Moving the massage chair

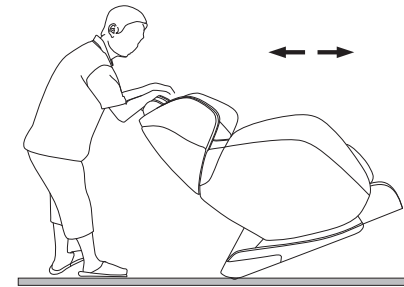

- As the following illustration, push the back rest downwards and tilt chair on to its wheels at 45° angle. Slowly push and maneuver the massage chair to desired location. Lower massage chair slowly and smoothly until it is fully flat on the ground.

#### CAUTION

- \*Do not move massage chair when occupied or in use.
- \*Moving the massage chair may cause damages to the floor. Floor protection is recommended (e.g. rugs or carpet).
- \*Do not drop or suddenly let go when use of the when use chair when moving as it may damage the chair.
- \*Two persons are strongly recommended while moving and extra care when handling the massage chair.