

KAHUNA  CHAIR®

KAHUNA MASSAGE CHAIR
HANI3200
MANUAL



CONTENTS

Please read and follow all safety and operating instructions listed in this user manual prior to use. Basic precautions should always be used when operating an electrical appliance.

Safety Instructions	2
Product Components	4
Preparation before using	5
Manual control	6
The adjustment before massage	7
Maintenance	8
Troubleshooting	9
Product Specifications	10



Warning

The plug must be fully inserted into an appropriate outlet. Improper connection of the equipment-grounding conductor can result in the risk of electric shock. Check with a qualified electrician or service technician, if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If the outlet is not suitable. Please ensure that a proper outlet is installed by a qualified electrician. When using the massage chair, basic precautions should always be followed to reduce the risk of electric shock, burns, fire, or injury to person.

1. Please ensure that you plug the massage chair into a proper electrical outlet.
2. Make sure the power plug is properly inserted into the proper electrical outlet to reduce the risk of short-circuit and fire.
3. Always unplug the massage chair from the electrical outlet immediately after use, before cleaning, etc.
4. Do not use the massage chair in places where the humidity is high.
5. Do not use the massage chair outdoors and avoid place with direct sunlight.
6. If the power turns off during use make sure to switch the power OFF position and pull the power plug out from the socket to prevent damage from occurring when the power is restored.
7. Do not operate the massage chair if the power cord is wet or damaged.
8. Do not plug/unplug the power cord from the socket with wet hands.
9. Supervision is necessary when the massage chair is being used by or near the children or disabled persons.
10. Use the massage chair only for its intended use as described in this user manual.
11. Do not use any parts not from factory.
12. Do not stand, sit or jump in the calf rest, back rest and armrest when the massage chair is in use to prevent any injury.
13. Do not attempt to stand on the backrest and armrest to prevent any injury to person.
14. Be careful not to fall asleep during the massage session
15. Always keep the massage chair clean and never insert any object into the gaps on and around the massage chair
16. Do not move the massage chair by pulling the power supply cord.
17. Always check whether the surface of the massage chair is torn or ripped before usage, if you find any unfamiliar rips in any area of the cloth in the backrest, do not use the massage chair, kindly contact the service centre immediately for repairs.
18. This appliance is designed for household use only.
19. For those suffering from illnesses, please consult your doctor for advice prior to use.



SAFETY INSTRUCTION

20. The following persons are requested to consult a doctor prior to use in order to reduce the risk of user feeling sick or suffering from injury.
 - Those who have malignant tumor
 - Those who suffer from heart disease
 - Those who are experiencing pregnancy, menstruation and puerperal fever
 - Those who require complete rest
 - Those who are under medical treatment
 - Those who suffer from back problem or whose backbone is abnormal or bent
21. If you experience pain during usage, stop using the massage chair immediately, if any injuries occur, seek medical treatment immediately.
22. Never massage the swollen or inflamed parts of the body.
23. This product is non-professional appliance designed to provide a comfortable massage. do not use this product as substitute for medical treatment.
24. Each massage session should not exceed 30 minutes. massage the targeted area only for 15mins, over-massaging can lead to overheating, thus giving the appliance a shorter lifespan.
25. Do not operate where aerosol(spray) product are used or where oxygen is being administered
26. The massage chair is not suitable for children aged 12 and below

NOTE


- This appliance is not intended for use by persons(including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the supply cord is damaged,it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance heats up during operation. persons sensitive to heat must take extra caution when using the appliance.

PRODUCT COMPONENTS

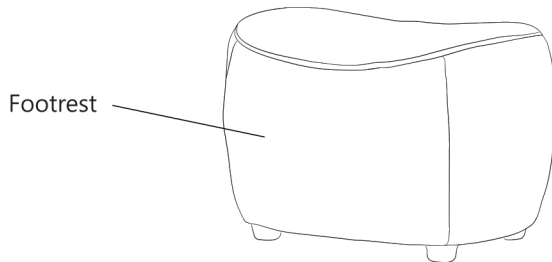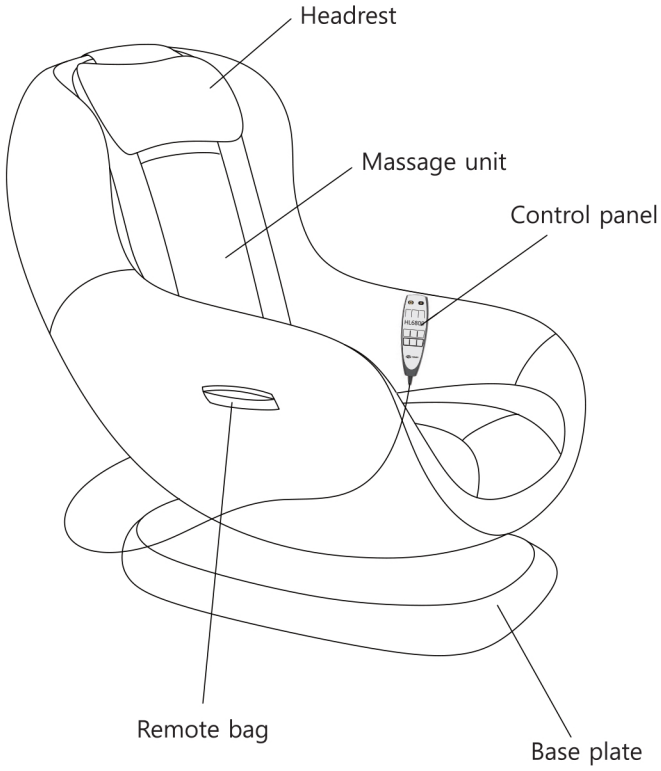


PREPARATION BEFORE USING

| Turn on the equipment |

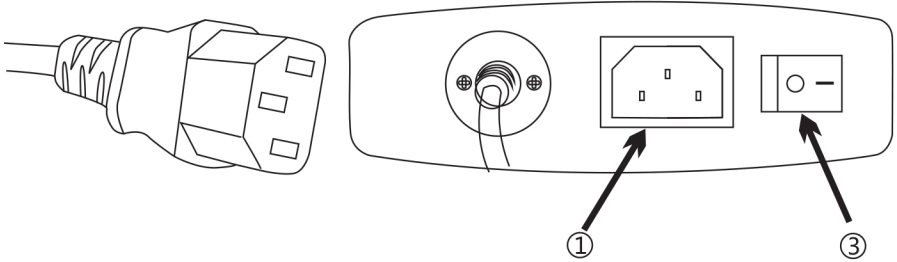


- 1.Plug the power cord into the power inlet.
- 2.Plug the power cord into the power outlet.
(Plug and socket of the power cord are subject to the practical model)

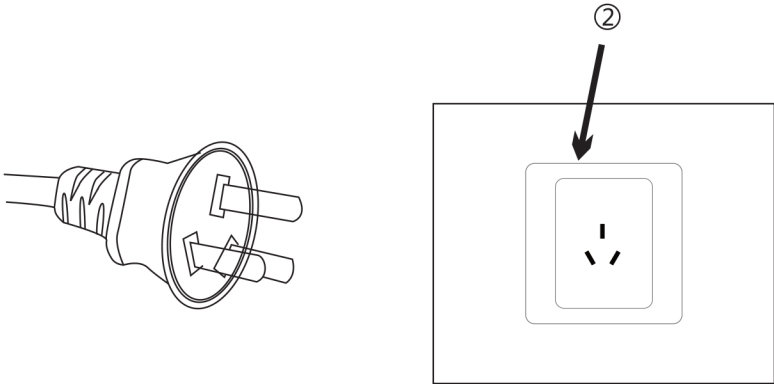

| Connect to power source |

- 3.Turn on the power switch.

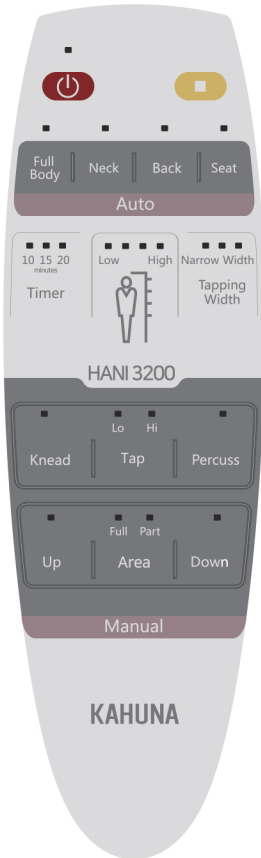

Power on/off



Turns on/off pause function.



Turns on/off the full body automatic massage function.



Turns on/off neck massage function.



Turns on/off back massage function.



Turns on/off seat massage function.



Press time button to adjust the time in 5 minute interval.



In the full body or the neck massage mode: Press up or down button to adjust the massage height, and the indicator light turn from left to right according to the height.



Press this button to adjust tapping width.



Turns on/off knead massage function.



Press this button to adjust knocking mode speed.



Turns on/off percuss massage function.



Press this button to change between full-body or select part area.



Hold this button to move up the rollers for fixed point massage.




Hold this button to move down the rollers for fixed point massage.

THE ADJUSTMENT BEFORE MASSAGE


| Method of moving |

As illustrated, push the backrest downwards and tilt chair on to its wheels at a 45° angle. Slowly push and maneuver the massage chair to desired location. Lower massage chair slowly and smoothly until it is fully flat on the ground.

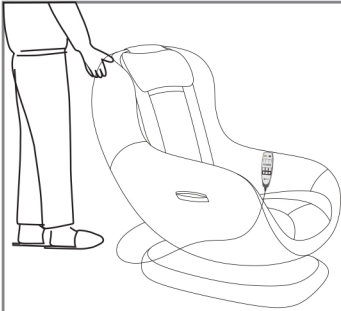


Attention

Never move the chair when the chair is working. (To prevent an accident or a damage)

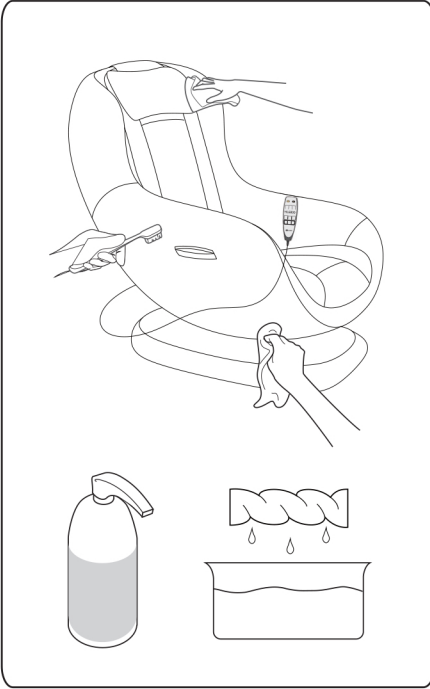

Use dry cloth to clean

Turn off and pull out the plug before cleaning the massage chair, do not touch the plug with wet hands.

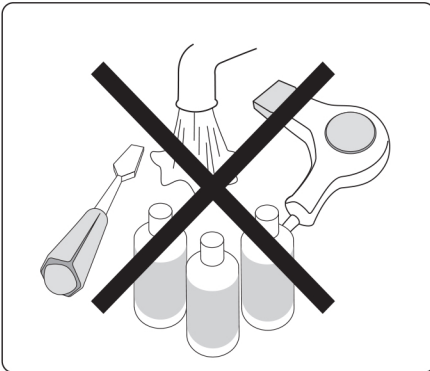

Prohibit using liquid cleaning products like water, alcohol, or other cleaning product to maintain a good quality.

TROUBLE SHOOTING

If the sounds or movements are not normal, please turn off the massage chair and remove the plug from the electric outlet. Please contact the customer service department for further assistance.

855.646.9500 / 1.714.388.2625, service@kahunachair.com

Problem	Solution
The massage chair is connected to power but is not functioning.	Check to see if the power plug is inserted or if the power outlet is functioning properly.
The remote controller is responding, but the massage chair is not functioning.	The massage chair may have automatically shut down due to overheating protection devices. Please turn off the power and allow the chair to cool off for 30 to 50 minutes.
Both the remote controller and massage chair are not responding.	The massage chair automatically turns into "full stop" mode when a massage program is completed. Please press the power button again to turn off the chair.



KAHUNA CHAIR PRODUCT WARRANTY REGISTRATION
<https://www.kahunachair.com/services/>

PRODUCT SPECIFICATIONS

Description	Specifications
Product Name	Kahuna Massage Chair
Model No.	HANI 3200
Rated Voltage	110-120V~
Rated Frequency	50/60Hz
Rated Power Consumption	60W
Dimension (LxWxH) Inches	43.3 x 28 x 41.4 / 45.7 x 29.4 x 42.2 inches
Weight (LBS)	Net Weight :96 lbs Gross Weight :124.6lbs

Product Massage Chair

Model HANI 3200


Distributed by AJX Distribution LLC

11125 Knott Ave, Suite D

Cypress, CA 90630

Tel 1-855-646-9500

Email INFO@KAHUNACHAIR.COM

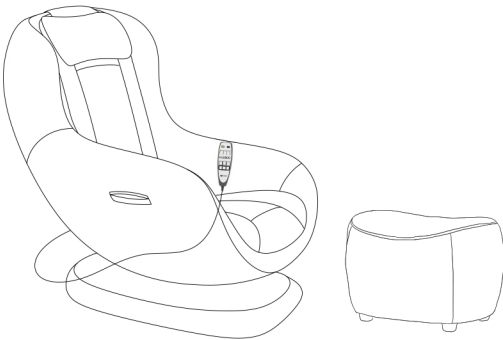

You must register warranty at
www.kahunachair.com/services/

INSTRUCTION MANUAL
MODEL : HANI 3200

Please read this user manual thoroughly
prior to operating the massage chair.
Store this booklet for future reference.